


Remote Receiver Manual

1. RX Multi Picture

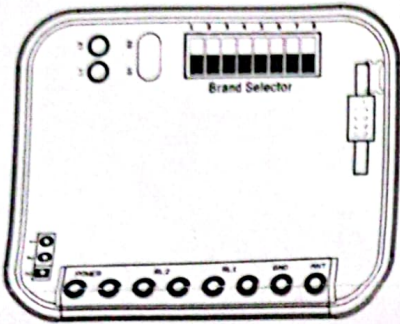

2. Brand selector

With 8 bits dip switch, the user can make difference combination for different remote brands. The brands selection show as below table

3. Learn Button and LED

In RX---Multi receiver, there are 2 independent channels. Each channel has independent learn button S1, S2 and L1, L2.

4. Power Input Selector

This receiver can work at AC/DC 12V~30V. However, it's better to change the PIS according to the power input. the input is great than 24V, shorten pin 2&3; shorten 1&2 if input less than 24V

5. Exchangeable Memory Card

The memory card can be removed from board for read, copy and backup.

6. Programming procedure:

1. First, select the correct brand for remote that will be entry (by dip switch).
2. Press the learn button, LED turns on. Press the button on the remote, the LED S1/S2 flashes 4 times, this remote button entry into the RX-MULTI successfully.
3. Repeat step 2 for another button.
4. Both channels work the same.

Erase all data in memory card:

Pressing and holding either learn button, the LED start flash. Keep holds pressing this button until the LED turn off. All data in the memory card will be erased permanently.

Notice: Be carefully for erasing all data in the memory card. The data will be erased permanently and cannot be recovered.

ITEM	SLECTION SWITCH	BRAND	FREQ	NOTES	ITEM	SLECTION SWITCH	BRAND	FREQ	NOTES
1		NICE FLORS	433.92MHZ		24		SOMMER	868.8Mhz	
2		MARANTEC	433.92MHZ		25		Liftmaster Rolling Code	868MHZ	
3		MARANTEC	868.3Mhz		26		CLEMSA Mastercode	443.92 Mhz	
4		Universal Fixed Code	433.92MHZ	Fixed Code	27		DITEC	315MHZ	
5		FAAC SLH ROLLING CODE	433.92MHZ		28		DITEC	390MHZ	